zenith

VN1ANTADIG

Designed For HDTV

360° Omni-Directional Digital Flat Design TV Antenna

360° Design-No Need to Constantly Reposition

Wide band amplifier boosts signal strength for increased picture and sound quality

Receives local HD and Digital TV broadcast signals for free
Receives maximum 1080i or 720p programming when transmitted
Blue power indicator light
High gain, low noise, wide band amplifier
Receives horizontal and vertical signals
Auto gain control
Powered by AC adapter or USB cable (both included)

Installation

Connect to Analog TV
- Connect coaxial cable connector to TV's RF input.

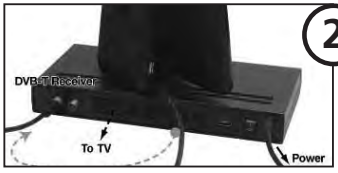

Connect to Digital TV
- Connect coaxial cable connector to digital receiver, then connect the receiver to TV.

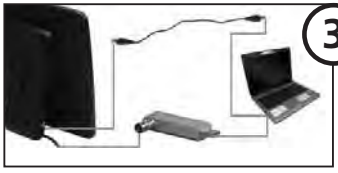

Connect to Computer
- Connect coaxial cable to dongle (not included). Connect antenna to computer with USB cable (included). Plug dongle into computer.

Adjust Antenna
- Lay antenna flat to recieve multi-directional horizontal signals. No adjustment is needed.
- Stand antenna up to recieve both horizontal and vertical signals. Adjust direction for best reception of individual channels.

Note:
Do not use antenna during thunderstorms. Turn off power.
Turn off power when not in use.
If antenna is not receiving correctly, try placing in different position.

Frequency: VHF (160~230MHz) / UHF (470~860MHz)
Polarization: Multi-Direction
Output level: Max 96dBuV
Input Voltage: AC110~120V or AC220~240V
Working Voltage: DC6V/100mA
Connector: IEC-connector female

Questions?, ¿Preguntas? 201.661.9944

©2010 AmerTac™

Saddle River Executive Centre
One Route 17 South
Saddle River, NJ 07458
www.amertac.com

Made in China/Fabriqué en Chine/Hecho en China

I10-0000-A

Zenith is a registered trademark of Zenith Electronics LLC and used under license.
Zenith est une marque de commerce déposée de Zenith Electronics LLC et utilisée sous licence.
Zenith es una marca registrada de Zenith Electronics LLC y se utiliza bajo licencia.

zenith

VN1ANTADIG

Antenne TV
numérique omnidirectionnelle 360° conception plate

La conception 360° élimine la nécessité de repositionnement constant

L'amplificateur large bande augmente la force du signal pour une plus grande qualité de l'image et du son

Réception gratuite de signaux de diffusion TV numérique et HD locaux

Permet la réception en résolution maximale 1080i ou 720p des programmes diffusés

Voyant d'alimentation bleu

Amplificateur large bande, gain élevé, faible bruit

Réception de signaux horizontaux et verticaux

Contrôle automatique du gain

Alimentée par adaptateur c.a. ou câble USB (les deux sont inclus)

Antena de TV
digital omnidireccional de 360° de diseño plano

El diseño de 360° elimina la necesidad de reposición constante

El amplificador de banda ancha refuerza la potencia de la señal para ofrecer una imagen y calidad de sonido óptimos

Recibe señales de transmisión de TV digital y de alta definición locales gratis

Permite la recepción en resolución máxima 1080i o 720p de los programas transmitidos

Luz indicadora de potencia azul

Amplificador de banda ancha, de alta ganancia y ruido bajo

Recibe señales horizontales y verticales

Control automático de ganancia

Alimentada a través de adaptador de CA o cable USB (incluye ambos)

Installation/Installation

Connect to Analog TV
- Connect coaxial cable connector to TV's RF input.

Connect to Analog TV
- Connect coaxial cable connector to TV's RF input.

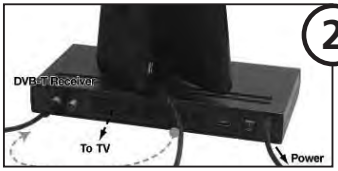

Connect to Digital TV
- Connect coaxial cable connector to digital receiver, then connect the receiver to TV.

Connect to Digital TV
- Connect coaxial cable connector to digital receiver, then connect the receiver to TV.

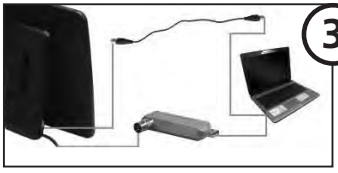

Connect to Computer
- Connect coaxial cable to dongle (not included). Connect antenna to computer with USB cable (included). Plug dongle into computer.

Connect to Computer
- Connect coaxial cable to dongle (not included). Connect antenna to computer with USB cable (included). Plug dongle into computer.

Adjust Antenna
- Lay antenna flat to recieve multi-directional horizontal signals. No adjustment is needed.
- Stand antenna up to recieve both horizontal and vertical signals. Adjust direction for best reception of individual channels.

Adjust Antenna
- Lay antenna flat to recieve multi-directional horizontal signals. No adjustment is needed.
- Stand antenna up to recieve both horizontal and vertical signals. Adjust direction for best reception of individual channels.

Frequency: VHF (160~230MHz) / UHF (470~860MHz)
Polarization: Multi-Direction
Output level: Max 96dBuV
Input Voltage: AC110~120V or AC220~240V
Working Voltage: DC6V/100mA
Connector: IEC-connector female

Frequency: VHF (160~230MHz) / UHF (470~860MHz)
Polarization: Multi-Direction
Output level: Max 96dBuV
Input Voltage: AC110~120V or AC220~240V
Working Voltage: DC6V/100mA
Connector: IEC-connector female

Note:
Do not use antenna during thunderstorms. Turn off power.
Turn off power when not in use.
If antenna is not receiving correctly, try placing in different position.

Note:
Do not use antenna during thunderstorms. Turn off power.
Turn off power when not in use.
If antenna is not receiving correctly, try placing in different position.